



March 14, 2014

## PRAMAC SERVICE BULLETIN

# GFCI Reset Procedure

If there is no power coming out of the GFCI, it may be necessary to reset the GFCI.

1. Disconnect any load(s) from the generator.
2. Start the engine.
3. The idle control switch **MUST** be **OFF**. (If present)
4. Check to make sure circuit breakers are not tripped. Reset the circuit breaker if tripped and make sure main breaker (If available) is **ON**.
5. Fully depress the **reset button** on the GFCI receptacle. A non-conductive tool may be required to do this.

If unable to reset the GFCI please contact Service Center help line. 800-445-2276