


Eagle Air Compressor part breakdown sheet - PT03A

Item	Description	Qty Req.	Part #
1	Intake filter ass'y	3	51111-5600
2	Cylinder head	3	52122-0101
3	lift limiter - discharge valve plate	6	51121-3102
4	valve seat	3	52122-2101
5	valve seat to head gasket	3	52122-2105
6	discharge valve plate	6	51121-2103
7	Intake valve plate	3	52122-2103
8	valve seat to cylinder gasket	3	52122-2104
9	piston	3	51122-5101
10	piston pin c.w snap rings	3	51122-5112
11	piston pin bushing	N/A	N/A
12	connecting rod c.w dipper **	3	52122-5120
13	connecting rod bearing (pair)	N/A	N/A
14	cylinder	3	52122-4101
15	oil filler cap	1	51111-4719
16	cylinder to crankcase gasket	3	51122-4103
17	oil sight glass c.w gasket	1	51111-4770
18	crankcase	1	51132-4701
19	crankshaft	1	51132-4601
20	front bearing	1	83501-6205
21	rear bearing	1	83501-6205
22	crankcase to rear bearing housing gasket	1	51122-4704
23	rear bearing housing	1	51122-4703
24	oil seal	1	51122-4708
25	crankcase breather	1	51111-4761
26	flywheel c.w fasteners	1	51132-6601
27	front bearing housing	1	51122-4706
28	crankcase to front bearing housing gasket	1	51122-4707
29	connecting (interstage) tubing	2	51132-7710
30	1.4" street elbow (oil drain)	1	SIREL14
31	interstage "Y" fitting	2	51121-7702
32	interstage "elbow" fitting	1	51112-7701
33	Eagle oil (650ml or 22oz)	1	EAOL10


\*\* Specify which cylinder

Item	Description	Qty Req.	Part #
A	Intake filter element kit includes: - three(3) intake filter elements	1	101000-300
B	valve repair kit includes: -valve seat to head gasket (item 5) -two(2) outlet valve plates (item 6) -intake valve plate (item 7) -six(6) valve plate screws -valve seat to cylinder gasket (item 8)	3	101000-165
C	ring repair kit includes: -valve seat to head gasket (item 5) -valve seat to cylinder gasket (item 8) -two(2) compression rings -one(1) oil control ring -cylinder to crankcase gasket (item 16)	3	101000-265
D	Valve Plate Assembly (Not shown)	3	52122-2100

Description	Part No.	Qty
Unloader	52122-0120	3
Unloading Elbow	69926-050101	1
Unloading Tee	69927-050101	2
Unloading Tube	TU-1 4-CU	5ft
Cylinder Head	51121-0101U	3

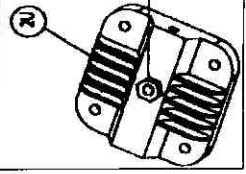

For PT03AU only

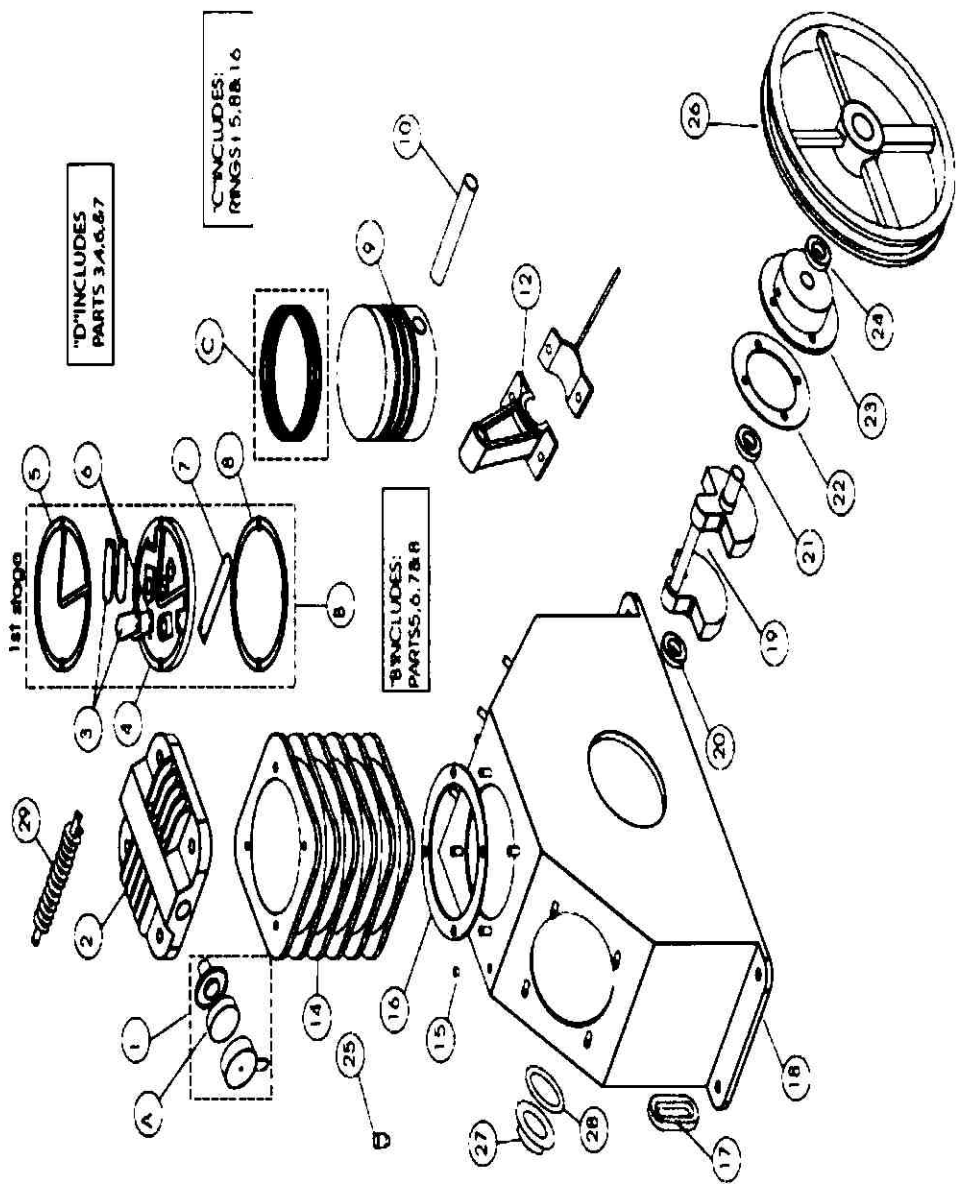

"D" INCLUDES PARTS 3,4,6,6,7

"C" INCLUDES RINGS 1,5,8,16

"B" INCLUDES PARTS 5,6,7&8

